



# Silver Bullet

Throttle Body Spacer


PN 46-38010

### Important!

Please verify that all parts on the Parts List are included before you begin the installation.

Make	Model	Year	Engine
Toyota	Tacoma	2016-2017	V6-3.5L

1. Remove the engine cover by first pulling up from the front, then pulling the cover towards you.
2. Disconnect the Crank Case Vent (CCV) hose from the Original Equipment Manufacturer (OEM) intake tube by pulling out firmly.
3. With the 10mm nut driver, remove the OEM intake tube by loosening the hose clamp at the throttle body and the hose clamp securing the intake tube to the housing.
4. Using your 8mm socket and ratchet, remove the four (4) bolts securing the throttle body to the intake manifold. These bolts will not be reused for this installation. (You may want to save these bolts in case the throttle body spacer is removed and returned back to stock.)
5. Install the new *aFe Silver Bullet* Throttle Body Spacer and the supplied spacer gasket between the intake manifold and throttle body. (The engraved side of the spacer will face toward the throttle body with the gasket between the spacer and the throttle body.) Please note that the intake manifold comes with a rubber O-ring gasket already installed in the groove on the manifold. Be careful not to damage it and leave in its place.
6. Use the supplied hardware to secure the throttle body and spacer to the intake manifold. (The lock washer will be placed on the screw first followed by the flat washer.) Tighten each set of fasteners at the mounting locations. Torque assembly to 89 in/lb.
7. Reinstall the OEM intake tube. Reconnect the CCV hose to the OEM intake tube. Tighten all connections. Reinstall the engine cover.

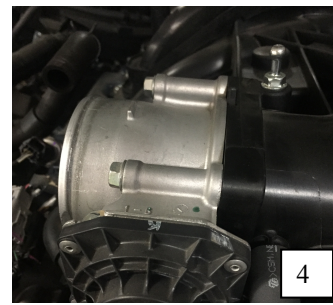

#### Parts List

- 1 aFe Silver Bullet Spacer
- 1 Spacer gasket
- 4 M6 x 70mm zinc plated screws
- 4 M6 zinc plated flat washers
- 4 M6 zinc plated lock washers

#### Tools List

- 10mm nut driver
- 8mm socket and ratchet

**advanced FLOW engineering, Inc.**

252 Granite Street, Corona, CA 92879

For TECHNICAL and INSTALLATION SUPPORT, please call 951-493-7134 OR email Tech@afepower.com (send photos if helpful)

All other type of calls, please call our main line at 951-493-7100

[www.aFePower.com](http://www.aFePower.com)

Revised: 10-24-2016 CL