



# Silver Bullet

Throttle Body Spacer

PN 46-32007

## Important!

Please verify the parts list and read all instruction steps before you begin installation.  
(Dodge Challenger SRT8 6.4L shown in photo)

Make	Model	Year	Engine	Make	Model	Year	Engine
Dodge	Charger R/T	06-16	V8-5.7L	Dodge	Magnum	05-08	V8-5.7L
Dodge	Charger SRT-8	06-10	V8-6.1L	Dodge	Magnum SRT-8	05-08	V8-6.1L
Dodge	Charger SRT-8	11-16	V8-6.4L	Chrysler	300C/300S	05-16	V8-5.7L
Dodge	Challenger R/T	09-16	V8-5.7L	Chrysler	300 SRT-8	05-10	V8-6.1L
Dodge	Challenger SRT-8	08-10	V8-6.1L	Chrysler	300 SRT-8/SRT	11-14	V8-6.4L
Dodge	Challenger SRT-8	11-16	V8-6.4L	Jeep	Grand Cherokee	06-10	V8-6.1L

**NOTES:** aFePOWER Intake System may require slight modification to fit with this throttle body spacer

**IMPORTANT:** Before starting the installation, identify the correct furnished screws for your specific application:

- For 05-10 V8-5.7L/6.1L engines, use the M6 x 70mm machined screws.
- For 11-15 V8-5.7L engines, use the #12 x 2"L self threading screws.
- For 11-15 V8-6.4L engines, use the #12 x 2-7/8"L self threading screws.



**Step 1.** Disconnect the temperature sensor from the intake tube. Then remove the OE Intake tube out of the vehicle.



**Step 2.** Remove the 4 throttle body screws. Leave factory sealing O-ring in place.

**Step 3.** Insert the new **Silver Bullet** throttle body spacer and provided gasket in between the throttle body and manifold as shown (The "Air-In" side should face the throttle body).

**Step 4.** Fasten the throttle body assembly using the (4) correctly identified screws and washers. Tighten the screws to 5 Nm (48 lb/in).

**Step 5.** Reinstall the intake tube. Make sure to tighten all of the clamps and reconnect the temperature sensor.

**Your install is now complete!** Make sure to retighten all bolts and clamps after 100 miles of driving.

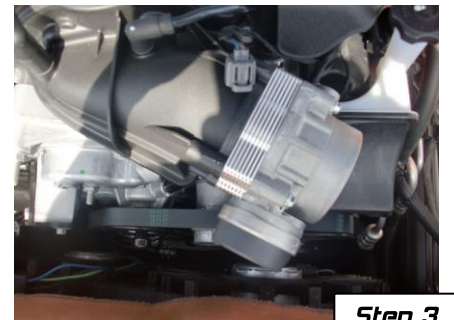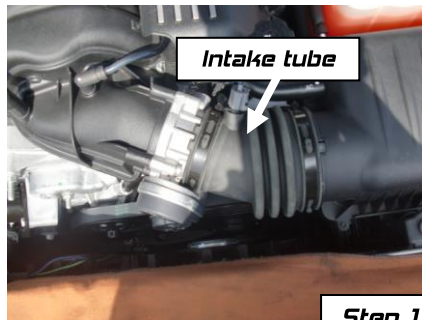

### Parts List

- 1 **Silver Bullet** Spacer
- 1 Gasket
- 4 #12 x 2-7/8"L self threading screws
- 4 #12 x 2"L self threading screws
- 4 M6 x 70mm machined screws
- 4 Washers

**advanced FLOW engineering**

252 Granite Street, Corona, CA 92879

Support: 951-493-7100

www.aFePower.com

Last Updated: 11/09/15