



# Silver Bullet

Throttle Body Spacer

PN 46-38012B

## INSTALLATION INSTRUCTIONS

Please verify the parts list and read all instruction steps before you begin installation.

Make	Model	Year	Engine
Toyota	Corolla	2019-2021	I4-2.0L (M20A)
Lexus	UX200	2019-2021	I4-2.0L (M20A)

**Note:** Please check our website for a complete and updated list of applications for this part number.

- Step 1.** Using pliers, disconnect the (2) hoses attached to the vacuum switch on the intake tube. Disconnect the electrical connector and plastic wire guide from the vacuum switch.
- Step 2.** Disconnect the hose from the valve cover that attaches to the intake tube. Disconnect the electrical wire from the MAF sensor. Using a 10mm nut driver, loosen the clamp connecting the intake tube to the throttle body. Unclip the upper airbox cover from the lower airbox housing and remove the intake tube and upper airbox cover from the vehicle.
- Step 3.** Using an 8mm socket, remove the (3) screws on the throttle body. Do not disconnect the hoses attached to the throttle body.
- Step 4.** Place the *Silver Bullet* spacer behind the throttle body with the provided o-ring installed into the groove of the spacer. Make sure the o-ring on the intake manifold is in place. Using the provided longer screws and washers, tighten the throttle body and spacer to the intake manifold.
- Step 5.** Reinstall the intake tube and upper airbox, tighten the clamp onto the throttle body, and clip the upper airbox to the lower airbox. Reconnect the electrical connector to the MAF sensor. Reconnect the hose to the valve cover. Reconnect the (2) hoses to the vacuum switch attached to the intake tube. Reconnect the electrical connector and wire guide to the vacuum switch.

**NOTE: Emissions Disclaimer:** This product is not currently CARB exempt and is not available for purchase in California or for use on any vehicle registered with the California Department of Motor Vehicles.

**Your install is now complete!** Make sure to retighten all bolts and clamps after 100 miles of driving.




Step 1



Step 2



Step 3

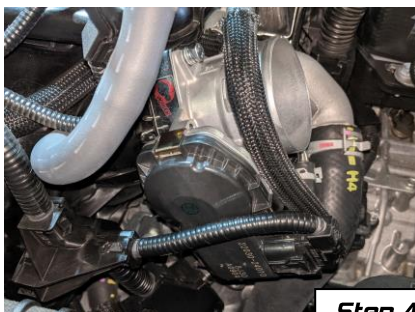

Step 4



Step 5

### Parts List

- 1 aFe *Silver Bullet* Spacer
- 1 O-Ring (-144)
- 3 M6 x 40mm Bolts
- 3 M6 Flat Washers
- 3 M6 Lock Washers

### Tools Needed

- 8mm socket
- Socket wrench
- 10mm nut driver
- Pliers

**advanced FLOW engineering**

252 Granite Street, Corona, CA 92879

For TECHNICAL and INSTALLATION SUPPORT, please call 951-493-7185, M-F 7:00am-5:00pm OR email [tech@afepower.com](mailto:tech@afepower.com)

[www.aFePower.com](http://www.aFePower.com)

Revised: 9-15-2021 JRS